






CONTROLS

-  **READ BUTTON** - Used to read messages and to activate pager functions. Also used to scroll through the hours and minutes for time setting
-  **MENU BUTTON** - Used to scroll through the pager menus and set the time and day.
-  **ON / OFF SWITCH** - This three-position slide switch is used to turn the pager ON and OFF, acts as a master reset button, and activates the backlight.

TURNING THE PAGER ON

-  **SILENT Mode** - Slide the On/Off Switch in an upward direction to the SILENT symbol. The pager vibrates (if equipped) and the lamp flashes for 4 seconds.
-  **ON Mode** - Slide the On/Off Switch in an upward direction to the ON symbol. The pager emits an interrupted beep and the lamp flashes for 4 seconds.

A full-Segment display accompanies the power-up alert.

888888888888

The display then changes to the standby screen.

8:59A
Standby Screen in SILENT Mode

8:59A
Standby Screen in ON Mode