

Eagle•Patriot

USER MANUAL

PG-2568PS

TABLE OF CONTENTS

1. Features

1.1 Basic Functions of Alphanumeric Pager

2. General Information on Alphanumeric Pager

2.1 External View and Descriptions of Keys

2.2 Annotations

2.3 Icon Definitions

2.4 Pager Status Definitions

2.5 Two Main Screens

3. Operations

3.1 Read Messages

(A) Receive Messages

(B) Read Private Messages

(C) Read Message Stored in Notebook

(D) Read Message in Mail Drop

3.2 Various Functions

3.2.1 Power ON/OFF

3.2.2 Alert Setting

3.2.3 Time and Date Settings

3.2.4 Alert Music Selection

3.2.5 12/24 Hours Alternation Settings

3.2.6 Alarm Setting

3.2.7 LCD Brightness Setting

3.2.8 Automatic ON/OFF Setting

3.2.9 Unread Messages Alert ON/OFF Setting

3.2.10 Mail Drop Alert ON/OFF Setting

3.2.11 Date Order Setting

3.2.12 Screen Display Time Setting

3.2.13 Message Zooming

3.2.14 Delete All Messages

3.2.15 Low Battery Indication

3.2.16 Background Light ON/OFF

4. Service Range Indication

 
1. Features

1.1 Basic Functions of Alphanumeric Pager

- Displays 4 lines per screen, 16 characters per line total 64 characters.
- Displays date and time
- Displays the receiving date and time of messages
- Maximum 8 private message lock-ups
- Buzzer or Vibration Alert for unread private messages (optional)
- Saves up to 16 private messages in Notebook only
- Delete private messages respectively or totally
- Max. 16 private message storage, “Memory Full” displayed when storage is full
- 3 different message receiving modes (audio, vibration, and silent mode)
- 10 different types of audio alerts (1 tones, 9 music)
- Selective screen display time (12 secs., 20 secs., 28 secs. or 36 secs.)
- Alarm function
- Within/Out of range indicator
- Back-lit function
- Low Battery indicator
- Low Battery alerts in tone or text
- 4 address codes (1 personal message and 3 broadcasting services)
- Battery Life: approximately 1 month (in average 8 calls daily)
- Receive broadcasting service messages with audio alert (optional)

2 General information on Alphanumeric Pager

2.1 External View and Descriptions of Keys

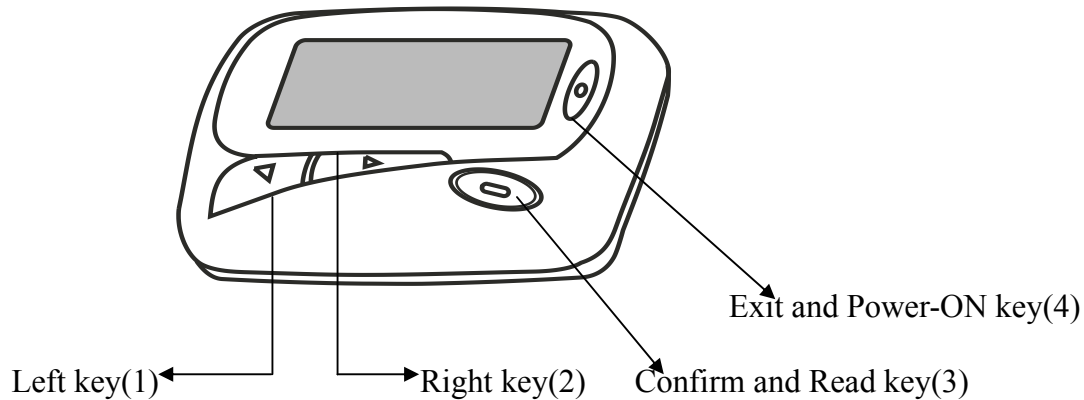

2.2 Annotations

- Display Current Date and Time
- Display the Receiving Date and Time of received messages
- Serial number for received messages
- Display the total number of unread messages
- Change Battery indication
- Memory Full and Status indications

2.3 Icon Definitions

	Audio alert mode		Notebook
	Silent mode		Power off
	Vibration alert mode		Automatic on/off setup
	Within range indicator		Out-of-range indicator
	Music selection		Unread private messages
	Set displaying time or date		Battery normal indicator
	Lock message		Locked message
	Mail drops receiving alert		Unlocked message
	Silent mail drop(s) receiving		Delete message
	Audio alert for unread private message		Duplicate message
	Silent mode for unread private message		Error message
	Message zooming		Mail Drop Repository(Read Message)
	Mail Drop Repository(Unread Message)		Alarm ON
	Screen display time		LCD brightness setting
	Alarm OFF		Delete all unlocked messages
	12/24 Hour Alternations		Month/Date order indication

2.4 Pager Status Definitions

- 1) When turning on the pager manually or by inserting battery, LCD displays:



- 2) Idle status

- Display is turned OFF
- Stays idle to save energy



- 3) Power off status (unable to receive message)

- a) Turn off the pager by Automatic ON/OFF function or Manual.
- b) Under the power off status, press "●" key(4) once (less than 2 second and release), the screen displays as below.



2.5 Two Main Screens

- 1) Initial Screen

In idle status, press "■" key(3) once to display the number of saved and new messages, and the date (except broadcasting message reading mode).



← *initial screen*

- 2) Menu Screen

In idle status or *initial screen*, press "●" key(4) once, the following screen displays to select from 14 different functions.



← *menu screen*

3 Operations

 
3.1 Read Messages

(A) Receive Messages

When receiving message(s), pager alerts out music, vibrates or keeps silent. According to the preset alert mode, it indicates whether it is a private message or a public message. If a private message is received, "☒" icon shows at the top left corner of the screen.


(B) Read Private Messages

- 1) In idle status, press "■" key(3) once to enter into the initial screen as below. Or it shows the following picture when a private message is received.

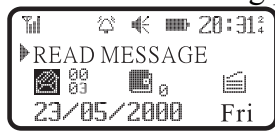


← initial screen

 - 2) If there is a message, press "■" key(3) once to enter into the following status.

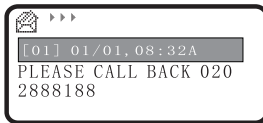

← read-message screen

 - 3) Then, press "■" key(3) again to read the latest received private message. The line at the top of the message content indicates the serial number, time, date of the message. If it is a duplicate message, "☒" icon would be shown. If it is an error message, "☒" icon would be shown. If the message is long and has not been displayed completely, "↓" icon would be shown at the bottom-right corner of the screen.



← read-message screen

- 4) To read the next message, press "▶" key(2) or "◀" key(1) to select message and then press "■" key(3).
- 5) In read-message screen, press "■" key(3) and hold for 2 seconds to enter read-message option screen.



← read-message option screen

To **delete this private message**, press "►" key(2) to reverse the color of "🔒" icon and then press "■" key(3) once to confirm.

To **lock a message** and avoid it being replaced by any new message, press "►" key(2) for three times to reverse the color of "🔒" icon, and then press "■" key(3) once. After that, "🔒" icon will be shown at the top left corner of this message and "🔒" icon will be changed to icon "🔒".

To **move this message to notebook**, press "◀" key(1) once to reverse the color of icon "📖" and then press "■" key(3) once. The message is then moved to notebook which icon is "📖".

(C) Read Message Stored in Notebook

While reading private message, press "►" key(2) once to reverse the notebook "📖" icon color of the **initial menu** and then press "■" key(3) to read the contents stored in the notebook. For reading and deleting the contents stored in the notebook, it is the same as in section 3.1 (B).



← **initial menu**

(D) Read Message in Mail Drop

In **initial menu**, press "►" key(2) once to reverse the public message "📧" icon color and press "■" key(3) once to show the following picture:



Press "◀" key(1) or "►" key(2), and then press "■" key(3) to read the contents of the respective items.

3.2 Various Functions

3.2.1 Power ON/OFF

1) In the display off status, press "●" key(4) once to enter into the following status.



2) To turn off the power, Press "◀" key(1) once to reverse the "🔒" icon color.



3) Press "■" key(3) once to turn OFF the pager.

4) In the pager off status, press and hold "●" key(4) for 2 seconds to turn ON the pager.

3.2.2 Alert Setting

Press "●" key(4) to see "Set alert", menu screen then in the alert setting mode, press "■" key(3) to select the alert mode.

Audio alert mode : icon "🔊"

Vibration alert mode : icon "📳"

Silent alert mode : icon "🔇"

Press "●" key(4) to enter the menu screen.

3.2.3 Time and Date Settings

Press "●" key(4) to enter the menu screen.

- 1) While in menu screen, press "▶" key(2) to reverse the icon color "🔊" and press "■" key(3) once to enter into the time and date setting status.



← menu screen

- 2) Press "■" key(3) to move the cursor to the corresponding position which is hour, minute, year, date and month. Then press "▶" key(2) or "◀" key(1) for adjustment.
- 3) Press "●" key(4) to exit after it is completed.

Press "●" key(4) to enter the menu screen.

3.2.4 Alert Music Selection

- 1) In menu screen, press "▶" key(2) to reverse the color of "🎵" icon.



- 2) Press "■" key(3) once to enter into the alert music selection mode.
- 3) Press "◀" key(1) or "▶" key(2) to move the cursor to the corresponding

number for the desired music. Then, press "■" key(3) once to confirm the selection.

- 4) Press "●" key(4) once to exit.

Press "●" key(4) to enter the menu screen.

3.2.5 12 /24 Hours Settings

In menu screen, press "▶" key(2) to reverse the "12^{hour}" icon color and press "■" key(3) once. Then, the icon will change to the icon of 24 hours system "24^{hour}". To change back to 12 hours system, press "■" key(3) once again and the icon will change back to 12 hours system.



Press "●" key(4) to enter the menu screen.

3.2.6 Alarm Setting

- 1) In menu screen, press "▶" key(2) once to reverse the "🔔" icon color and press "■" key(3) to enter into the alarm setting mode.
- 2) Press "◀" key(1) or "▶" key(2) to turn on alarm "🔔". Press "◀" key(1) or "▶" key(2) to turn off the alarm "🔕".
- 3) Press "■" key(3) to move the cursor to the hour, minute of the alarm time. Then, press "▶" key(2) or "◀" key(1) for adjustment.
- 4) Press "●" key(4) to exit.



Press "●" key(4) to enter menu screen.

 
3.2.7 LCD Brightness Setting

In menu screen, press "▶" key(2) to move the cursor to "🔆" icon and press "■" key(3) to enter into the LCD brightness setting mode. Then press "▶" key(2) to increase or "◀" key(1) to decrease the contrast level. Press "●" key(4) to exit.



3.2.8 Automatic ON/OFF Setting

In **menu screen**, press "►" key(2) to move the cursor to "🔊" icon and press "■" key(3) to enter the automatic ON/OFF setting mode. Then, press "■" key(3) to select the modified item and press "◀" key(1) or "►" key(2) for modification. Press "●" key(4) to exit.

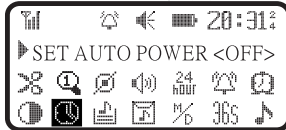

3.2.9 Unread Messages Alert ON/OFF Setting

In **menu screen**, press "►" key(2) to move the cursor to the "📧" icon and press "■" key(3) once to turn ON or OFF this function. If this function is ON and there are any unread messages, an audio alert sounds every 3 minutes.



3.2.10 Mail Drop Alert ON/OFF Setting

In **menu screen**, press "◀" key(1) move the cursor to "📧" icon and press "■" key(3) once to turn ON or OFF this function. If this function is ON and a public message is received, a short audio alert is sounds. If this function is OFF, no alert sounds when a public message is received.



3.2.11 Date Order Setting

In **menu screen**, press "►" key(2) to move the cursor to "%Y%" icon and press "■" key(3) to change the date order from "date, month, year" or "month, date, year". Then press "●" key(4) to exit.



3.2.12 Screen Display Time Setting

In **menu screen**, press "►" key(2) to move the cursor to "36S" icon and press "■" key(3) to select the desired screen display time. Four choices are 12S (12 seconds), 20S (20 seconds), 28S (28 seconds) and 36S (36 seconds).



3.2.13 Message zooming

In **menu screen**, press "◀" key(1) to move the cursor to "①" icon, there are 3 types of zooming for message display, press "■" key(3) to confirm.



- ① Small
- ② Med
- ③ Large

3.2.14 Delete All Messages

In **menu screen**, press "◀" key(1) the cursor to "❌" icon. When pressing "■" key(3), the screen shows "N" (NO) or "Y" (YES). Then press "◀" key(1) or "▶" key(2) to move the cursor to "Y" and press "■" key(3). Then, all read but unlocked private messages will be deleted except the unread private messages, locked private and mail drops.



3.2.15 Low Battery Indication

When the energy level of the battery is low, the battery icon will change from "■" to "□". An audio alert sounds every 4 minutes and a message "LOW BATTERY!" will be displayed on the screen.



3.2.16 Background Light ON/OFF

In any dark environment (pager in display mode), press "◀" key(1) or "▶" key(2) and hold for 2 seconds to turn on the background light. When the screen displays disappear, the background light will automatically turn off.

4. Service Range Indication

If pager is within service range, icon "📶" will be shown at the top left corner of the screen. If pager is out of service range, "📶" icon will be shown.

United Communications Corporation
888-763-7550
www.uccwireless.com