



### Controls





Function button


Lamp button    Read button

 **Function button**

- Turn pager on
- Enter Function mode
- Complete setting process in each function

 **Lamp button**









- Turn the light On or Off
- Escape to the standby screen, which shows time, date, alarm status, and alert status.
- Press  twice to escape to the standby screen.

 **Read button**

 
- Read messages
- Select setting and features in Function mode
- Turn pager On

---


### Display Symbols

<p> : Alert (Beep) ON</p> <p> : Alert (Melody) ON</p> <p> : Alert (Vibrate) ON</p> <p> : Alarm ON</p> <p> : Message Lock</p>	<p> : Duplicate Message</p> <p><b>new</b> : New Unread message</p> <p> : Change battery</p> <p> : Message longer than 12 Characters</p>
--	---

## TURNING THE ST 800 PLUS PAGER ON



 
Press and hold the Read button or Function button for 2 seconds while pager is in OFF mode. Time and date will appear on the button center of the screen.



Upon inserting a battery, pager will vibrate and beep briefly as it enters the normal reception mode.

If there are new unread messages, the **new** icon and the number of unread messages will be displayed on the screen. And if all the messages are read, the number of messages in memory will displayed.

## TURNING THE PAGER OFF

 


Press the Function button to enter the Function mode. Press the Function button four times until " POWER OFF ? " is displayed on the screen.



Press Read button to enter Pager OFF mode.




## RECEIVING AND READING MESSAGES

 

When a message is received, the selected Alert will be activated.

 Press the Read button to stop the Alert and to read message.



The following information will be displayed in the order of the newest to the oldest message: Message number, time stamp and message,



Reading messages with 13 Characters or more



Messages with 13 or more characters will display " ► " at the top right corner of the screen. Press the Read button to read the rest of the message.