

INDICATORS

POWER ON	ENABLED PRIVATE TIME	IN RANGE OR OUT RANGE INDICATION
AUDIO ALERT	NEW PAGE OR UNREAD MESSAGE	BATTERY LEVEL STATUS
VIBE OFF	LOCK MESSAGE	MESSAGE CONTINUATION
ENABLED ALARM	UNLOCK MESSAGE	






CONTROL BUTTONS


	<ul style="list-style-type: none"> Used to navigate through the Function menu and through your messages Used to navigate through time, alarm, and date setting functions 		<ul style="list-style-type: none"> Used to enter the Function menu mode Used to turn the Backlight off Used to exit to current Function mode 		<ul style="list-style-type: none"> Used to turn the pager on and off Used to read the received message Used to activate your selection Used to adjust the time, alarm, and date setting functions
--	--	--	---	--	---

TURNING THE PAGER ON

Press the read button for two seconds to turn the pager on. A start-up screen is momentarily displayed and the pager alerts the currently selected alert-mode (Vibe, Audio, Silent).

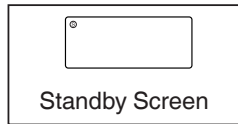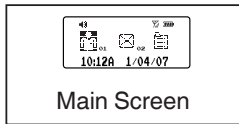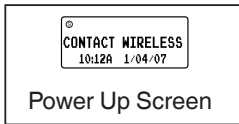


TURNING THE PAGER OFF

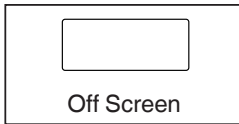


- Press the button to display the Function menu
 - Press the or button to move the cursor on OFF icon
 - Press the button
- "TURN PAGER OFF?" is displayed
- Press the button again to turn the pager off

The pager is now off and the screen should be blank

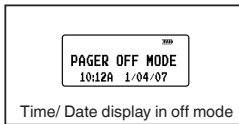

NOTE: If you choose the function key () while the pager is off, the pager will display Pager Off Mode and the time and date . The display disappears after eight (8) seconds or after you press any of the pager keys.

SETTING THE TIME AND DATE

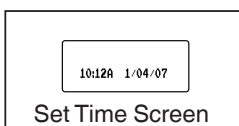

To set the Time and Date, perform the following steps.
From Function menu:

- Press or button to move the cursor to display "SET TIME"
- Press the to display the Set Time Screen
- Press to adjust the current digit
- Repeat the two previous steps to adjust all time digits
- Press to activate the current setting and exit to the Main Screen
- Press to move the cursor to the next digit