

**INDICATORS**

- |               |                            |                                  |
|---------------|----------------------------|----------------------------------|
| POWER ON      | ENABLED PRIVATE TIME       | IN RANGE OR OUT RANGE INDICATION |
| AUDIO ALERT   | NEW PAGE OR UNREAD MESSAGE | BATTERY LEVEL STATUS             |
| VIBE OFF      | LOCK MESSAGE               | MESSAGE CONTINUATION             |
| ENABLED ALARM | UNLOCK MESSAGE             |                                  |


**CONTROL BUTTONS**


- Used to navigate through the Function menu and through your messages
- Used to navigate through time, alarm, and date setting functions



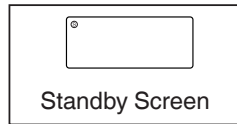
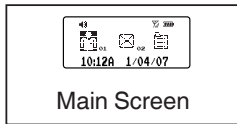
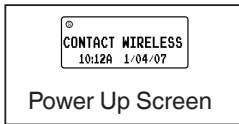
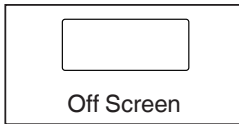
- Used to enter the Function menu mode
- Used to turn the Backlight off
- Used to exit to current Function mode



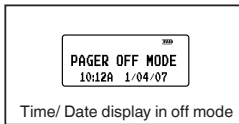
- Used to turn the pager on and off
- Used to read the received message
- Used to activate your selection
- Used to adjust the time, alarm, and date setting functions

**TURNING THE PAGER ON**

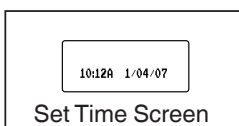
Press the read button for two seconds to turn the pager on. A start-up screen is momentarily displayed and the pager alerts the currently selected alert-mode ( Vibe, Audio, Silent).


**TURNING THE PAGER OFF**


- Press the button to display the Function menu
  - Press the or button to move the cursor on OFF icon
  - Press the button
- "TURN PAGER OFF?" is displayed



- Press the button again to turn the pager off
- The pager is now off and the screen should be blank
- NOTE: If you choose the function key ( ) while the pager is off, the pager will display Pager Off Mode and the time and date . The display disappears after eight (8) seconds or after you press any of the pager keys.

**SETTING THE TIME AND DATE**


To set the Time and Date, perform the following steps.  
From Function menu:

- Press or button to move the cursor to display "SET TIME"
- Press the to display the Set Time Screen
- Press to adjust the current digit
- Repeat the two previous steps to adjust all time digits
- Press to activate the current setting and exit to the Main Screen
- Press to move the cursor to the next digit