

VOICE MAIL

REVIEW MESSAGES

- 1 CALL YOUR PAGER NUMBER
- 2 DURING THE GREETING IMMEDIATELY PRESS *
- 3 WHEN PROMPTED ENTER YOUR 4-DIGIT ACCESS CODE
- 4 PRESS 7 TO REVIEW MESSAGES

PRESS 7 TO LISTEN OR REPLAY MESSAGES
 PRESS 3 TO DELETE CURRENT MESSAGES
 PRESS 5 TO SAVE CURRENT MESSAGES
 PRESS 4 TO SCROLL THROUGH MESSAGES
 PRESS 6 TO SKIP BACK 2-4 SECONDS TO HEAR OVER

* Default access code is 1234

PAGER NUMBER	ACCESS CODE
PAGER E-MAIL ADDRESS SEND TEXTS DIRECTLY TO A PAGER # USING YOUR CELL PHONE	
@page.contactwireless.com	
ACCESSING VOICE MAIL	
A. DIAL YOUR PAGER NUMBER C. ENTER YOUR ACCESS CODE	
B. DURING THE GREETING D. FOLLOW THE VOICE COMMANDS IMMEDIATELY PRESS [*]	
PRESS [7] TO REVIEW MESSAGES	
[7] LISTEN OR REPLAY MESSAGES	
[3] DELETE CURRENT MESSAGES (NOTE: DELETED MESSAGES ARE NOT RECOVERABLE)	
[5] SAVE CURRENT MESSAGES	
[4] SCROLL THROUGH MESSAGES	
[6] SKIP BACK 2-4 SECONDS TO HEAR OVER	

SIDE 1

RECORD PERSONAL GREETING

- 1 CALL YOUR PAGER NUMBER
- 2 DURING THE GREETING IMMEDIATELY PRESS *
- 3 WHEN PROMPTED ENTER YOUR 4-DIGIT ACCESS CODE
- 4 PRESS 8 FOR USER OPTIONS
- 5 THEN PRESS 4 TO RECORD PERSONAL GREETING
- 6 WHEN FINISHED RECORDING GREETING PRESS * TO STOP
- 7 PRESS 2 TO ACCEPT AND SAVE

* Default access code is 1234

PRESS [8] FOR USER OPTIONS	
[4] RECORD PERSONAL GREETING	
[*] STOP RECORDING	
[5] PLAYBACK GREETING	
[2] ACCEPT AND SAVE GREETING	
[3] DISCARD AND RE-RECORD GREETING	
[#] QUIT AND RETURN TO USER OPTIONS MENU	
[7] CHANGE YOUR SECURITY CODE	
ENTER A NEW 4-DIGIT SECURITY CODE	
[2] TO ACCEPT AND SAVE	
[3] TO DISCARD AND ENTER A DIFFERENT SECURITY CODE PRESS	
[#] TO QUIT AND RETURN TO USER OPTION MENU	
TEXT MESSAGING AVAILABLE @	
www.ContactWireless.com	

SIDE 2

CHANGE SECURITY CODE

- 1 CALL YOUR PAGER NUMBER
- 2 DURING THE GREETING IMMEDIATELY PRESS *
- 3 WHEN PROMPTED ENTER YOUR FOUR DIGIT ACCESS CODE
- 4 PRESS 8 FOR USER OPTIONS
- 5 THEN PRESS 7 TO CHANGE YOUR SECURITY CODE
- 6 ENTER A NEW 4-DIGIT SECURITY CODE
- 7 PRESS 2 TO ACCEPT AND SAVE

* Default access code is 1234


PRESS [8] FOR USER OPTIONS	
[4] RECORD PERSONAL GREETING	
[*] STOP RECORDING	
[5] PLAYBACK GREETING	
[2] ACCEPT AND RE-RECORD GREETING	
[3] DISCARD AND RE-RECORD GREETING	
[#] QUIT AND RETURN TO USER OPTIONS MENU	
[7] CHANGE YOUR SECURITY CODE	
ENTER A NEW 4-DIGIT SECURITY CODE	
[2] TO ACCEPT AND SAVE	
[3] TO DISCARD AND ENTER A DIFFERENT SECURITY CODE PRESS	
[#] TO QUIT AND RETURN TO USER OPTION MENU	
TEXT MESSAGING AVAILABLE @	
www.ContactWireless.com	

SIDE 2

SMS

SMS TEXT TO PAGER

- 1 ENTER IN PAGER NUMBER YOU WOULD LIKE TO SEND A MESSAGE TO
- 2 COMPOSE A TEXT MESSAGE
- 3 SEND MESSAGE

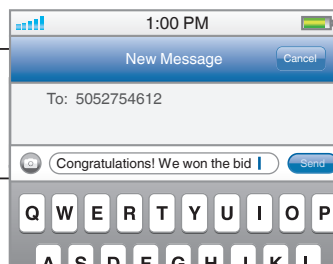

EXAMPLE

E-MAIL TO PAGER

E-MAIL TO PAGER INFORMATION

[This service is only available on alphanumeric / text pagers with transcription]

YOUR PAGER E-MAIL ADDRESS IS:

(pager phone number including the area code, NO dashes or spaces)
EXAMPLE: 5058889999@page.contactwireless.com

Any text information that can be sent to an e-mail address, can be sent directly to your pager. If your e-mail service is capable, you may also forward an alert that you have a new unread e-mail waiting in your mailbox. You can also forward a copy or the full text of the e-mail message directly to your pager. We suggest that you only forward a copy of the message, that way a complete message will be saved in your e-mail in-box should you have a need to refer to it. Each pager has a distinct individual e-mail address, as shown above.

PAGER NUMBER	ACCESS CODE
PAGER E-MAIL ADDRESS SEND TEXTS DIRECTLY TO A PAGER # USING YOUR CELL PHONE	
@page.contactwireless.com	
ACCESSING VOICE MAIL	
A. DIAL YOUR PAGER NUMBER C. ENTER YOUR ACCESS CODE	
B. DURING THE GREETING D. FOLLOW THE VOICE COMMANDS IMMEDIATELY PRESS [*]	
PRESS [7] TO REVIEW MESSAGES	
[7] LISTEN OR REPLAY MESSAGES	
[3] DELETE CURRENT MESSAGES (NOTE: DELETED MESSAGES ARE NOT RECOVERABLE)	
[5] SAVE CURRENT MESSAGES	
[4] SCROLL THROUGH MESSAGES	
[6] SKIP BACK 2-4 SECONDS TO HEAR OVER	

SIDE 1